FIG. 1

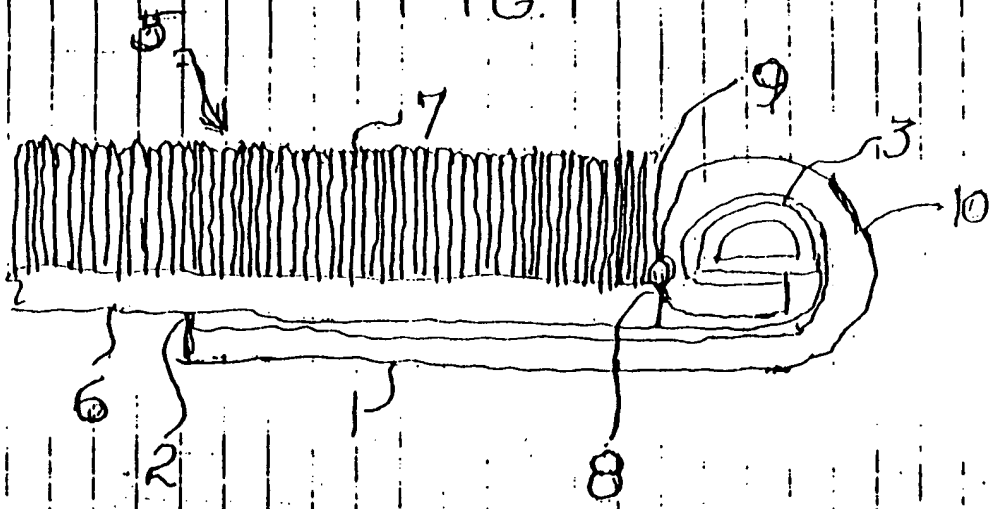

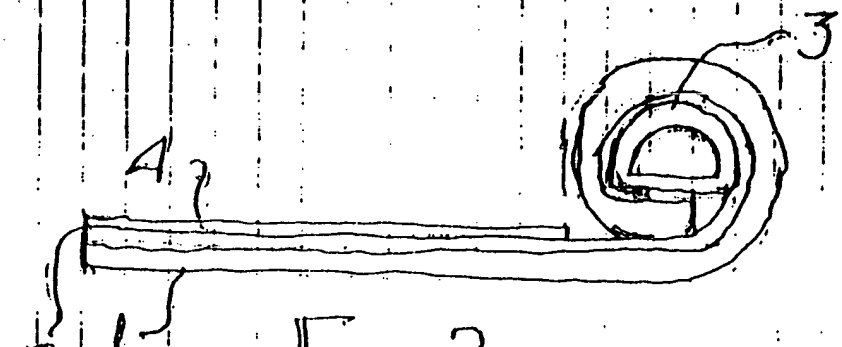

FIG. 2

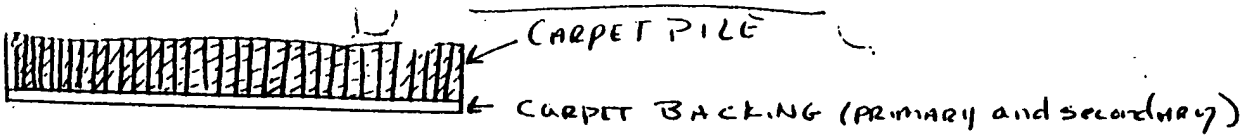

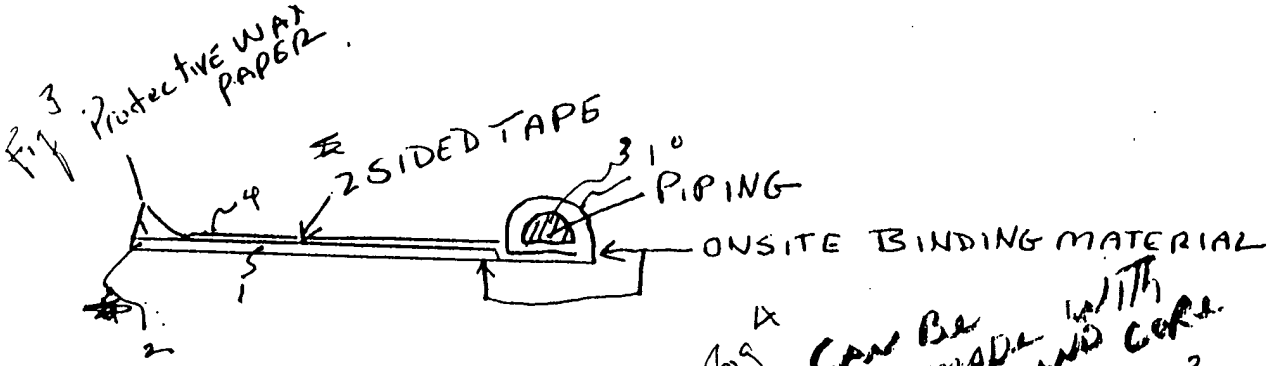

Application

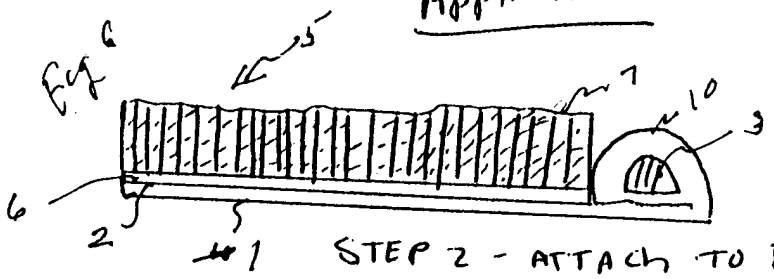

STEP 2 - ATTACH TO Bottom of carpet and About CORD TO SIDE of CARPET

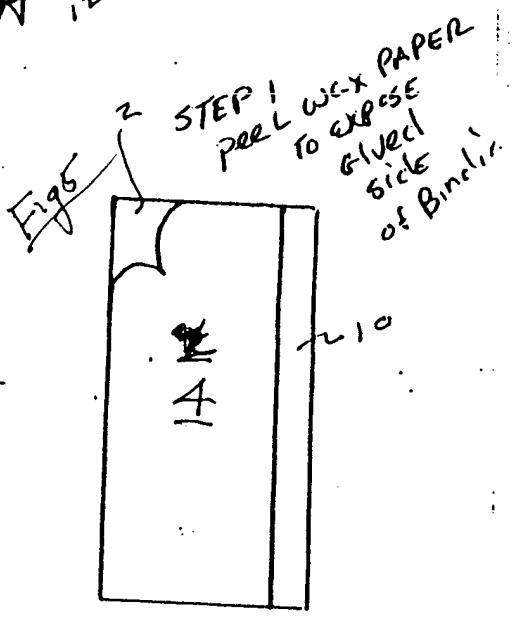

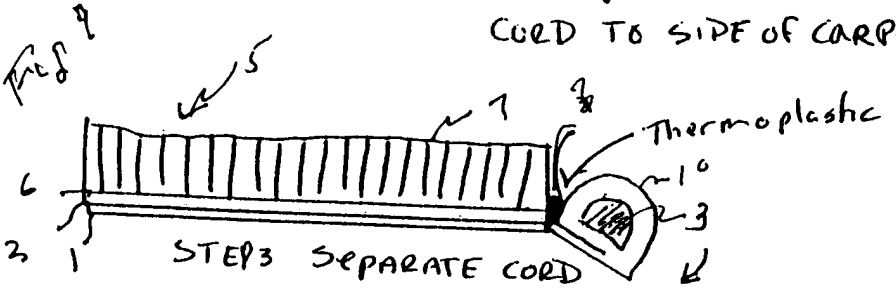

STEP 3 SEPARATE CORD from edge and apply a bead of Thermoplastic glue using a hot glue gun.

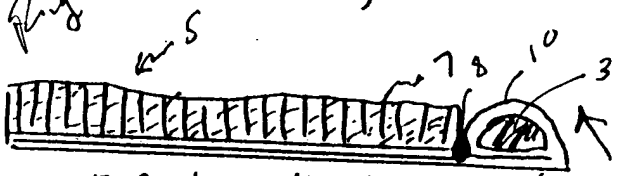

STEP 4. Reattach by folding together again to form a sealed bond